
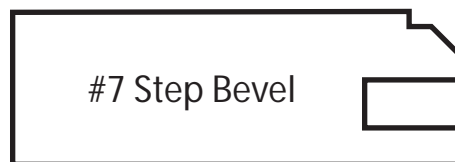
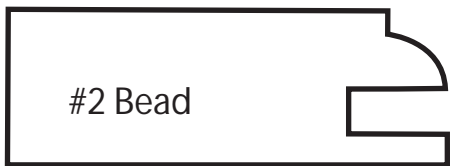
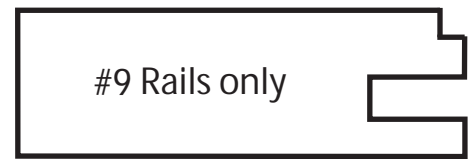


# Cope & Stick

## Inside Edge Profiles

---

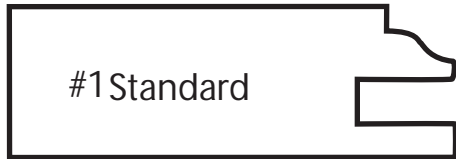

### 7/16 Solid Panel

(For recessed panel look)



Must specify 2" or 3" on or off center

Note: Profiles are as close to actual size as possible

### V-Grooves Patterns

Must specify 2" or 3" on or off center

